

# **DC TO AC POWER INVERTER 1000W**

## **DC12V or 24V to AC220V-240V Instruction Manual**

**Please read user manual before use.**



### **USEFUL APPLICATIONS**

**RUN NOTEBOOK COMPUTERS, RADIOS, SMALL TVS,  
VCRS, LAMPS, FANS, FAX.....ETC.**

### **SPECIFICATION**

**INPUT VOLTAGE RANGE : DC 10-15V (12V) // DC 20-30V (24V)**

**INPUT FULL LOAD CURRENT : 100A (12V) //50A (24V)**

**STANDBY INPUT CURRENT : <0.6A (12V) // <0.6A (24V)**

**OUTPUT VOLTAGE (AC) : 220V-240V**

**OUTPUT WAVEFORM : MODIFY SINEWAVE**

**OUTPUT FREQUENCY : 50Hz**

**CONTINUE OUTPUT POWER : 1000W**

**PEAK OUTPUT POWER : 2000W**

**EFFICIENCY : 85 - 90%**

**BATTERY LOW PRE-ALARM :  $10.5 \pm 0.5V$  (12V) //  $21 \pm 1V$  (24V)**

**BATTERY LOW SHUTDOWN :  $10 \pm 0.5V$  (12V) //  $20 \pm 1V$  (24V)**

**THERMAL PROTECT :  $60 \pm 5$  °C(MICROCONTROLLER )**

**AUTO-OPERATION FAN (TEMPERATURE OR LOAD)**

**OVERLOAD PROTECT : YES (MICROCONTROLLER )**

**OUTPUT SHORT PROTECT : YES ( MICROCONTROLLER )**

**BATTERY EX. 12V / 24V PROTECT : YES ( MICROCONTROLLER )**

**BATTERY POLARITY PROTECT : YES (BY FUSE )**

**FUSE : 20A\*6PCS (12V) // 10A\*4PCS (24V)**

**DIMENTION ( L\*W\*H) mm : 340\*135\*79**

**WEIGHT : 2.5kg**

## **TROUBLESHOOTING**

**IF THE INVERTER DOES NOT APPEAR TO BE FUNCTIONING PROPERLY, THERE ARE SEVERAL REASONS WHY THE INVERTER MAY NOT BE RESPONDING.**

**1) POOR CONTACT**

**\*CLEAN CONTACT PARTS THOROUGHLY.**

**2) RECEPTACLE HAS NO POWER**

**\*CHECK FUSE, REPLACE DAMAGED FUSE.**

**\*CHECK RECEPTACLE WIRING. REPAIR IF NECESSARY**

**3) FUSE IS BLOWN**

**\*THE FUSE IS LOCATED INSIDE THE DC PLUG. REPLACE FUSE WITH A FUSE OF EQUIVALENT VALUE.**

**4) OVERLOAD CAUSED AC OUTPUT REDUCE**

**\*REDUCE THE WATTAGE OF YOUR LOAD TO LOWER THAN 1000 WATTS.**

**5) THERMAL CAUSED AC OUTPUT REDUCE**

**\*UNDER HEAVY LOADS FOR EXTENDED PERIODS OF TIME. THE AC INVERTER WILL REDUCE OUTPUT TO PREVENT DAMAGE TO EXCESS HEAT. IF THIS HAPPENS, PLEASE PROCEED AS BELOW :**

**(A) SWITCH OFF THE POWER SWITCH OF THIS INVERTER.**

**(B) DECREASE LOAD OF THIS MACHINE I. E. DISCONNECT SOME OF THE APPLIANCES OR WAIT UNTIL THIS INVERTER BECOME COOL.**

**(C) SWITCH ON THE POWER SWITCH OF THIS INVERTER.**

**6) LOW-BATTERY SHUTDOWN**

**\*RECHARGE YOUR BATTERY AND RESUME OPERATION.**

## **CAUTION**

**ALWAYS PLACE THE INVERTER IN AN ENVIRONMENT WHICH IS:**


**(A) WELL VENTILATED**


**(B) NOT EXPOSED TO DIRECT SUNLIGHT OR HEAT SOURCE**

**(C) OUT OF REACH FROM CHILDREN**


**(D) AWAY FROM WATER/MOISTURE, OIL OR GREASE**

**(E) AWAY FROM ANY FLAMMABLE SUBSTANCE**

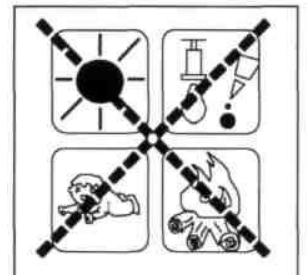


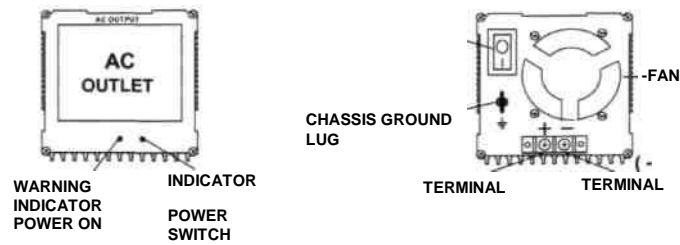


**CAUTION : DO NOT REVERSE INPUT. USE RED BATTERY CORD TO CONNECT (+) OF A DC BATTERY TO (+) TERMINAL. AND THEN, USE BLACK BATTERY CORD TO CONNECT (-) BATTERY TO (-) TERMINAL.**

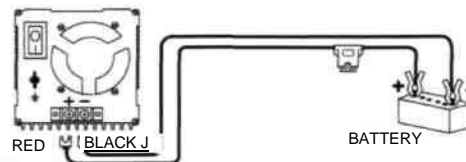

**WHEN CONNECTED TO ANY APPLIANCE, BE SURE TO TURN ON INVERTER FIRST. AND THEN TURN ON THE POWER SWITCH OF THE APPLIANCE.**

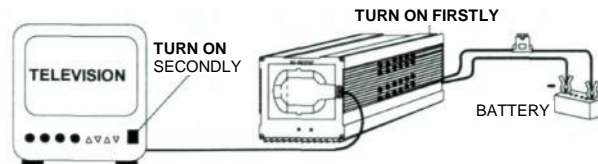


**WARNING:**  
**START THE ENGINE OF CAR. WHEN CONNECTED TO ANY APPLIANCE,**

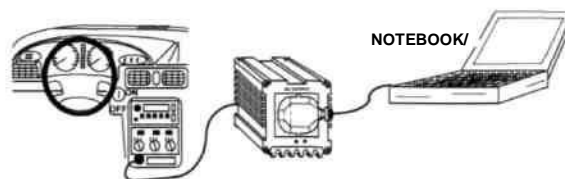


**DOES NOT EXCEED THE OUTPUT POWER 150W OF THE INVERTER.**


DURING OPERATION, WHEN THE POWER SWITCH IS ON, IF POWER ON INDICATOR IS NOT LIGHTED. PLEASE CHECK THE FUSE IN THE BATTERY CABLES OR CIGARETTE PLUG. IF THE FUSE IS SPOILT, FOR REPLACEMENT, USE THE SAME CURRENT FUSE.

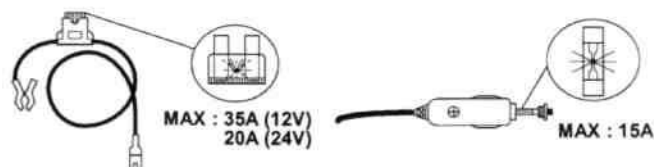

IF THE TOTAL WATTS OF ELECTRICAL APPLIANCES EXCEEDS THE OUTPUT CAPACITY OF INVERTER. OR AFTER OPERATING FOR A PERIOD OF TIME. IF THE TEMPERATURE OF THE INVERTER REACHES 60°C, THE INVERTER SHALL BE REDUCED AC OUTPUT BY THE PROTECTION CIRCUIT.

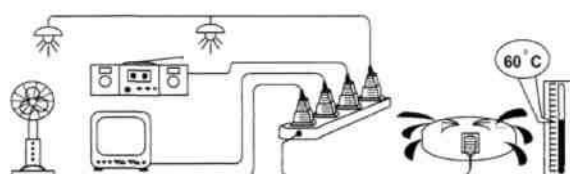

**\*WARNING\* FLUORESCENT LAMP**  
DO NOT USE THIS DEVICE WITH FLUORESCENT LAMPS.

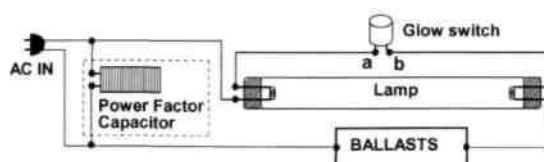

### WARNING SIGNAL

Condition	Warning signal cycle	Shutdown signal cycle
Low battery alarm:	BI BI BI (pause)	BEE BEE BEE (pause)
Over heating alarm:	BI BI (pause)	BEE BEE (pause)
Over load alarm:	BI BI BI BI BI BI	Continuous tone
Note: BI is a short beep, and BEE is a longer beep.		